
fermliving.com


REST LAMP

ASSEMBLY MANUAL - REST LAMP 5151

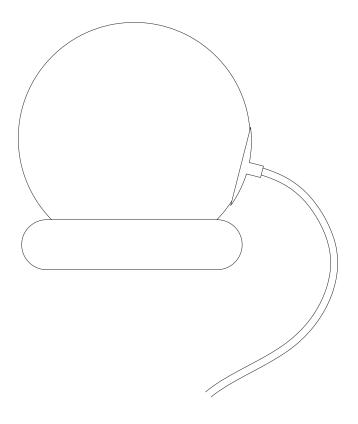




ASSEMBLY PROCESS ASSEMBLY PROCESS

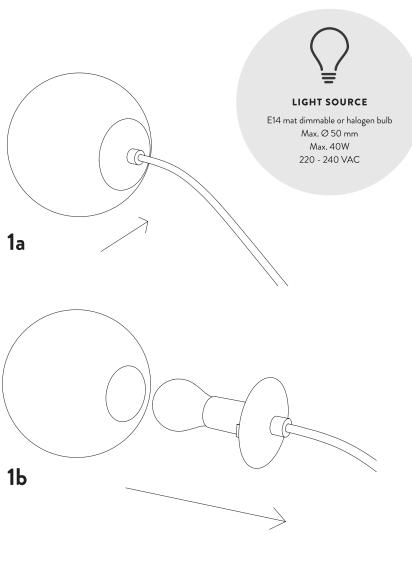

TO REMOVE

To remove the socket move the 3-wings metal structure to one side and then gently pull outwards.

Try to do so pulling from the metal structure, rather than from the cable.

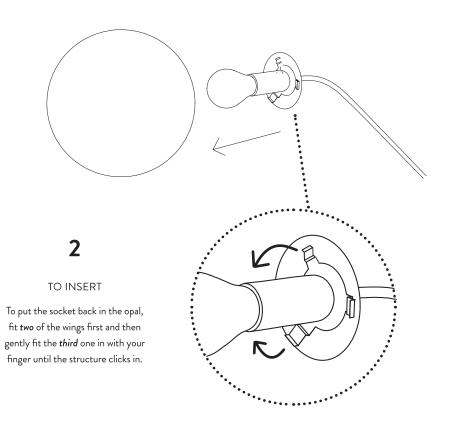





WARNING:

IF THE EXTERNAL CABLE OF THIS LUMINAIRE IS DAMAGED, IT SHALL BE EXCLUSIVELY REPLACED BY THE MANUFACTURER OR HIS SERVICE AGENT OR A SIMILAR QUALIFIED PERSON IN ORDER TO AVOID A HAZARD. REMEMBER TO TURN OFF WHEN CHANGING THE LIGHT BULB.

THIS LAMP IS NOT APPROVED FOR OUTDOOR USE. ISOLATION CLASS II.

ENVIRONMENTAL FRIENDLY DISPOSAL.
YOU CAN HELP PROTECT THE ENVIRONMENT.

PLEASE REMEMBER TO RESPECT THE LOCAL REGULATIONS:
HAND IN THE NON-WORKING ELECTRICAL EQUIPMENT'S
TO AN APPROPRIATE WASTE DISPOSAL CENTRE.

THE PACKAGING MATERIAL IS RECYCLABLE. DISPOSE OF THE PACKAGING IN AN ENVIRONMENTALLY FRIENDLY MANNER AND MAKE IT AVAILABLE FOR THE RECYCLABLE MATERIAL COLLECTION-SERVICE.